


Removing and installing rear brake pads

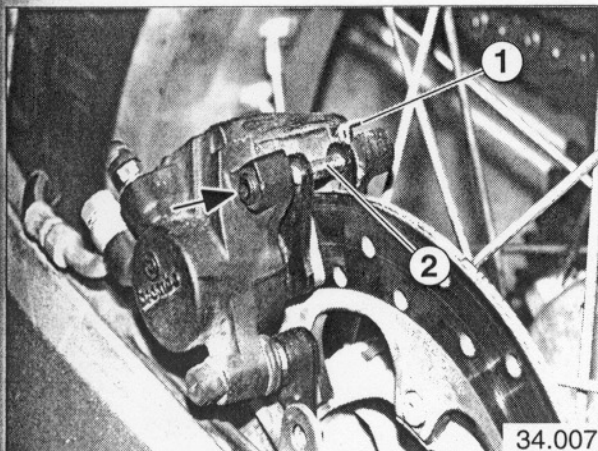

- Remove wheel cover together with bracket.
- Release split pin (1).
- Knock out retaining pin (2) (in direction indicated by arrow).
- Remove rear wheel.
- Remove brake support bracket together with brake caliper from rear swinging fork.



Note

If only the brake pads are to be changed, do not loosen brake line at brake caliper.

- Remove brake pads.



Caution

Pad thickness must not drop below minimum thickness.

Change pads only as complete set.

Use new set of attachment parts.

Pad thickness


min. 1.5 mm



Note

The brake pads must feature clearly visible inclined wear marking.

- Pull brake caliper from brake support bracket.

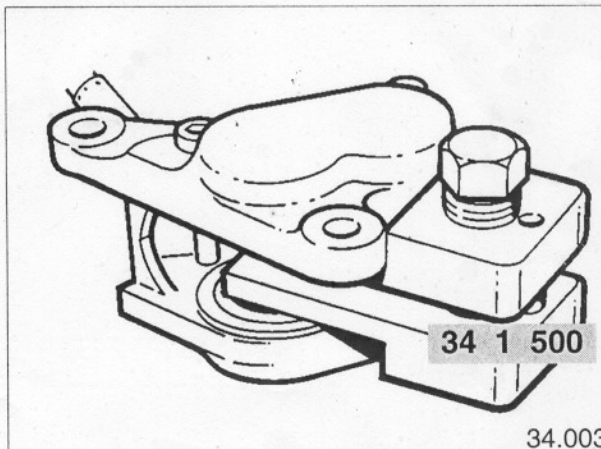

- Fully depress piston with reset fixture, **BMW-No. 34 1 500**.
- Installation takes place in reverse order of removal.



Caution

Actuate brake several times until brake pads make contact.

Tightening torque:

Full-floating axle

100 Nm

