


36.006

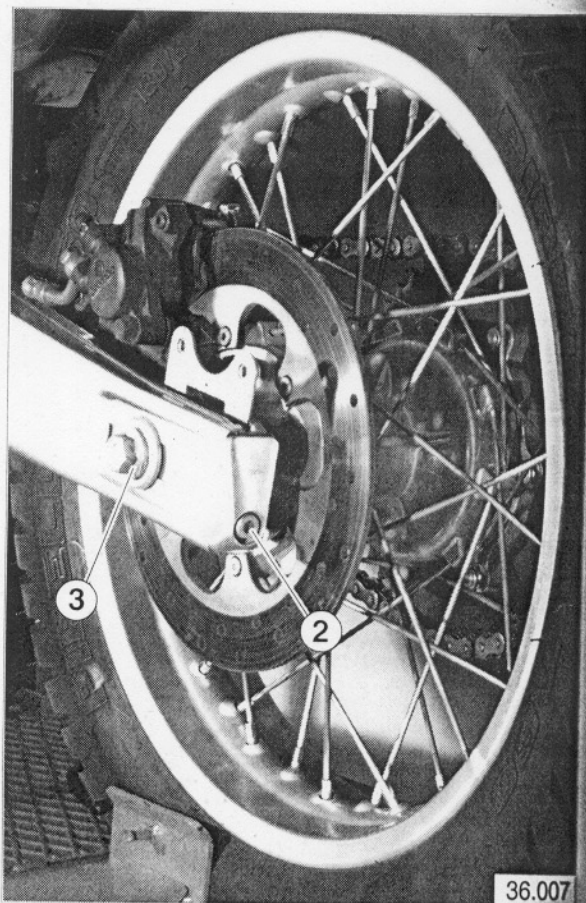

36.007

## Removing and installing rear wheel

- Remove wheel cover together with bracket.
- Unfasten nut on full floating axle (1).
- Loosen chain tensioning screws (2) on left and right sides.
- Remove chain from chain sprocket.
- Remove half axle (3).
- Firmly hold brake caliper and remove wheel by pulling to the rear.
- Installation takes place in the reverse order of removal.


### Note

Coat full-floating axle with **Shell "Retinax A"** grease.

### Caution

Ensure the chain is correctly tensioned.

## Removing and installing drive damper

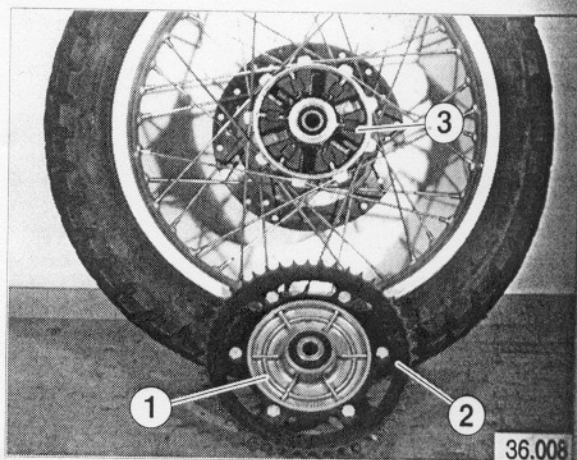

36.008

- Remove chain sprocket support bracket (1) together with chain sprocket (2) from rear wheel hub.
- Pull drive damper (3) out of rear wheel hub.
- Installation takes place in the reverse order of removal.

Tightening torque:  
Full-floating axle

100 Nm

72